
Care Instructions

Layered Mattresses

Serenity, Unity Pillowtop, Tranquility
and Harmony topper

PROTECT your mattress or topper with a washable mattress pad under the sheet.

VACUUM your mattress or topper regularly with a hand attachment. This removes dust and microscopic debris and helps reduce the buildup of allergens.

DO NOT MACHINE WASH OR DRY CLEAN the casing. Although zippered casings are removable, this is to allow customizing or rearranging layers — not laundering. Washing wool batting (quilted inside the fabric) will cause shrinkage. Dry cleaning results are unreliable; we cannot warranty that a dry-cleaned casing will not shrink. Casings are hand-sewn; replacements can be purchased.

ROTATE AND/OR FLIP individual layers as desired (particularly Softs). This will be unnecessary for most users but may be helpful for those who weigh over 165 pounds or who seldom change sleeping position.

SPOT-CLEAN the casing if necessary. Sponge the area with a sponge lightly dampened with a cold water and mild natural soap solution. Do not saturate. Air dry thoroughly.

FOR SEVERE STAINS spot-cleaning won't remove, try running a cold water and mild soap solution through just the soiled area of the casing until clean. Press out water on a dry towel; repeat as needed. Do not wring/twist ("agitated" wool fibers lock together, which means shrinkage). Line dry or dry flat until thoroughly dry.

AIR OUT a casing or casing top periodically over a railing or on a blanket in the sun if desired. This applies to casings only, not to the latex layers. Natural latex is degraded by UV light.



Questions? Contact us at 866-856-4044.
